



RS7000 CARD

SM-RS7-01

 
Techstep (Drum & Bass / New Step)

Style		Sektionen
1	Rock ka shokka	A-E
2	Big Bottom XXL	A-G
3	Space Try'bizzz	A-G
4	225 kmh 911 TDI	A-G
5	Amb-D&B Remixed	A-J
6	Ambient D&B	A-J
7	Darkside D&B	A-J
8	Easy Jump D&B	A-J
9	Progressive D&B	A-J
10	Rolling Basses	A-J
11	Spacy D&B	A-J
12	Techstep D&B	A-J
13	too bad to step	A-E
14	coming 2 you	A-E
15	hoxton square	A-E
16	tgm padstep	A-J
17	phonkcity	A-D
18	fridazed	A-D
19	GJoshD&B	A-J
20	tgm jazzcore	A-J
21	tgm techstep	A-J

Pattern must be loaded from Load Menu.

You can load single pattern (PATT) oder all pattern of (ALL).

If you received set with Download or CD-ROM you have to copy files to Smart Media Card before loading to RS7000. If you have connected SCSI CD-ROM drive to RS7000 you can load styles directly from CD-ROM.



Am Langberg 97 A

D-21033 Hamburg

Telefon: 040 - 738 62 23

E-Mail: vertrieb@easysounds.de

www.easysounds.de