



YAMAHA

RS7000 CARD

SM-RS7-03

Electronic Beatz

(Disco Dance Techno Elektro Pop)

Style		Sektionen
1	Discoteque Paris	A-J
2	Discoteque Berlin	A-J
3	DJB in da house	A-J
4	Beatdriver	A-J
5	Jaicoteque	A-J
6	Elektro Funk	A-J
7	Tech-House	A-J
8	Progressive 01	A-J
9	big robot	A-E
10	Retrigger!	A-J
11	Progressive 04	A-J
12	Elektro 01	A-J
13	Elektro 05	A-J
14	Elektro 07	A-J
15	Bertje Funk	A-J
16	Darkstep_ Elektro	A-J
17	80s Elektro	A-J
18	Tango' Chanson	A-J
19	AB Pop Waltz	A-J
20	GP 80's Italopop	A-H

Pattern must be loaded from Load Menu.

You can load single pattern (PATT) oder all pattern of (ALL).

If you received set with Download or CD-ROM you have to copy files to Smart Media Card before loading to RS7000. If you have connected SCSI CD-ROM drive to RS7000 you can load styles directly from CD-ROM.



Am Langberg 97 A

D-21033 Hamburg

Telefon: 040 - 738 62 23

E-Mail: vertrieb@easysounds.de

www.easysounds.de